Mark's Model Works Laser Cut Forest Floor Fern Instructions

Packet contents

- Ten sheets of green leaf spiders (40)

Other material you will need to complete this build

 White glue (recommended is a flexible, matt finish glue such as Scenic Textures scenic glue) Tools you will need to complete this build

- Fine tip felt pen
- Smooth sculpting tool
- Foam mat (yoga mat or similar)
- Tweezers
- Scissors








Step 1. Carefully remove the ferns from the waste.



Step 2.
Using a soft foam mat and a smooth sculpting tool curl the leaves.



Step 3. Turn the spider over and force the centre into the foam

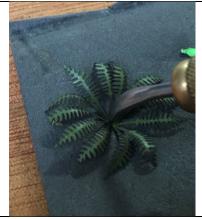

Step 4.
The leaves bend up as the centre is forced into the foam.



Step 5.
Ready for planting.



Step 6.
Ferns can be planted using white glue.
The spiders can also be stacked to

make bushier plants.